

Sola LT Instructions



Sola LT Instructions



Armrest Height + Lever Lift and hold lever to adjust armrest height. Release lever to set

> Seat Height Lever Lift and hold lever to adjust seat height. Release lever to set.

Back Angle Lever Lift and hold lever to adjust back angle. Release lever to set.



Weight rating: 250lbs

 Lumbar Support
Slide lumbar pad up or down to adjust.
Seat Tilt Lever

Lift lever to adjust seat angle. Push lever down to set.

Seat Depth Lever Lift and hold lever to slide seat. Release lever to set.

Seat Tilt Tension
Knob
Turn knob clockwise
to tighten and counter
clockwise to loosen.



www.BodyBilt.com