


Sola LT Assembly Instructions

BodyBilt®

PARTS:

- 1 allen wrench
- 1 Base
- 5 casters
- 2 arms
- 2 lock washers
- 2 beveled washers
- 1 seat pan and mechanism assembly
- 1 seat back assembly w/ three (3) 1/4-20x3/4"bolts in pre-drilled holes
- 1 standard cylinder
- 1 plastic telescoping cylinder cover

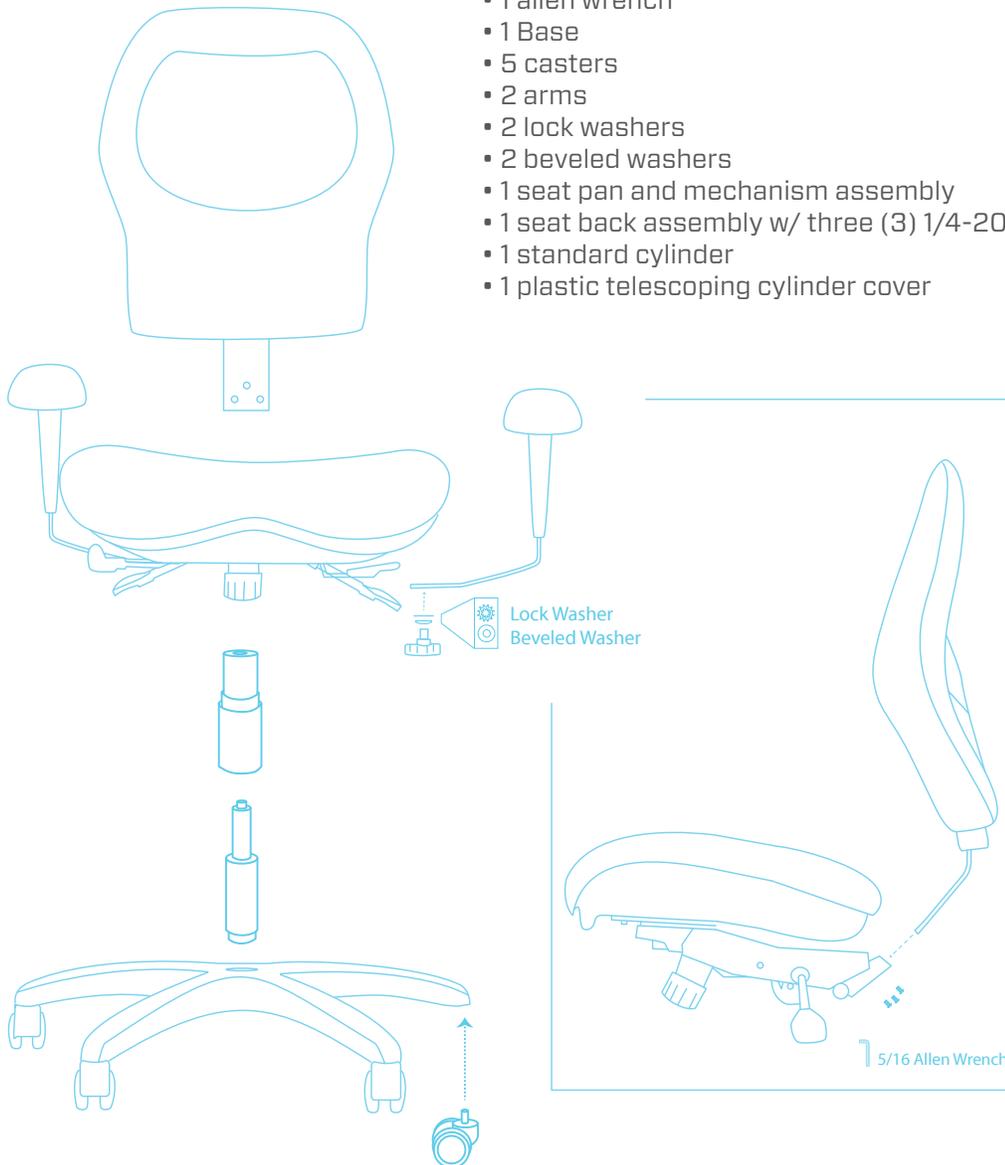

- Remove all parts from the box. Check that you have all parts and that they are in good condition.
- Turn base upside down and insert the caster posts into the base. You may have to exert some force to get them fully seated.
- Flip the base over so it's now right side up and resting on the casters and drop the thicker end of the cylinder into the center hole of the base.
- Slide the telescoping plastic cylinder cover over the cylinder.
- Position the seat pan and mechanism over the cylinder and set it down into place. The cylinder should go into the hole in the bottom of the seat pan mechanism.
- Remove the three bolts from the seat back post.
- Insert the seatback post into the channel on back of the seat mechanism so the holes line up. Screw the bolts in and tighten them.
- The arms are inserted into a channel on the bottom of the seat. Do one arm at a time. The arm will be held in place by a rubber knob, a lock washer and a beveled washer.

If you have questions or need assistance, please call BodyBilt customer service at 1-800-364-5299.